

SUPERLOCK 2.0 SURFACE FIXED RAPID RESET CODE GATE LOCK

Specification Sheet

BDGWRR / BDGSWRR 2.0

SINGLE-SIDED/DOUBLE-SIDED KEYPAD

- RapidReset feature enables you to change codes in just seconds.
- Surface mounted fixing for quick installations.
- Auto-latching – close the gate and the latchbolt latches into the gate frame. To open the gate – enter the code and turn the handle.
- No power needed – High quality mechanical keypads ensure long lasting durability.
- Latchbolt is adjustable in length for precise fitting on site. Moves 20mm (3/4").
- Secure keep included

Product code	Description
BDGSWRRRL	Left handed, keypad on outside, free exit handle on inside
BDGSWRRR	Right handed, keypad on outside, free exit handle on inside
BDGWRRRL	Left handed, keypad on both sides
BDGWRRR	Right handed, keypad on both sides



INSTALLATION

1. Position L bracket at a suitable height on the outside of the gate and mark it for reference. Start off the holes with a smaller drill bit, using the plate as a jig.
2. Drill the holes partway through, then mark and drill from the other side to ensure holes are straight.
3. Drill the centre spindle hole with a 12mm drill bit, and open out the top and bottom holes with the 12mm drill bit to allow insertion of the outside keypad. Insert outside keypad and fasten with M5 screws provided. M5 screws may have to be cut to length with a grinder or a hacksaw. Screw L bracket to the gate with screws supplied. Insert spindle (ensuring it is fully seated) and measure a protrusion to the correct length (BDGW - 55mm (2 3/16"), BDGSW - 70mm (2 3/4"), BDGWRR - 45mm (1 3/4") BDGSWRR - 60mm (2 3/8")) then cut to length using a grinder or hacksaw. Use the notches as cutting guides - if your measurement falls between notches, cut at the next longer notch and trim further if needed..
4. Once cut, insert the spindle, then place lock body over spindle and fix using M8 fixing bolts and cover plate supplied. Use 5mm hex key to tighten bolts.
5. To fit the keep, align with the lock and mark the position on the gate poast, then fasten with screws supplied.
6. ADJUSTMENT: To adjust the length and orientation of the latch, twist clockwise to shorten oranti-clockwise to lengthen and lock in position with the3mm hex key supplied.

WATCH VIDEO
 OF INSTALLATION

