

## SUPERLOCK 2.0 QUICK EXIT | NO ACCESS

### Specification Sheet **BQ-NA 2.0**

#### FEATURES

- Quick-Exit: Push pad designed to facilitate rapid exit through gates, with a 14 digit keypad for secure entry.
- Easy to fit: Slim 70mm (2 3/4") wide lock case, along with an adjustable and removable latchbolt, ensures easy fitting to gates.
- Secure: The latchbolt moves 15mm (5/8"), ensuring the bolt enters deep into the gatepost.
- Durable: The latchbolt is supported on the edge of the gatepost to reduce friction and wear.
- Anti-corrosion: Designed for outdoor use for long-lasting performance.
- A security shroud is available to prevent access to the push pad from the outside

#### PRODUCT DETAILS

Product code	Description
BQ1030LNA	To fit 10-30mm (1/2" - 1 1/4") gate frames, left hand
BQ1030RNA	To fit 10-30mm (1/2" - 1 1/4") gate frames, right hand
BQ4060LNA	To fit 40-60mm (1 1/2" to 2 1/4") gate frames, left hand
BQ4060RNA	To fit 40-60mm (1 1/2" to 2 1/4") gate frames, right hand

**Compatible with:** Superlock Keeps (BSK, BSKS, BSKG) & Shroud (BQS)

#### INCLUDED IN THE BOX

- 2.5mm hex key + 3mm hex key
- Latchbolt
- M8 fixing bolts
- Strike plate (self-drilling fasteners)
- Face plate

#### INSTALLATION

- Drill 2 x 9mm (3/8") holes at 140mm (5 1/2") centres for fixing bolts provided.
- Drill a 18mm (3/4") clearance hole for the latchbolt at 60mm (2 3/8") centres up from the bottom fixing hole.
- Hold the lock against the back of the box section and screw on the latchbolt through the larger hole.
- Lock the latchbolt with the hex key supplied by inserting the hex key into the end of the latchbolt.
- Fix lock in place using the stainless steel bolt support plate and the countersunk screws provided. Ensure the latchbolt moves freely.
- Fix strike plate by either welding or screw fixing onto the gate post.

**Maintenance:** Every 6 months, lubricate the latchbolt with light oil. Annually, dismantle the lock and spray mechanism with light oil.



#### 5 Year Warranty

